


EV Diagnostic Instrument




Model: S03 User Manual

Please read this manual carefully before use and keep it properly for future reference.

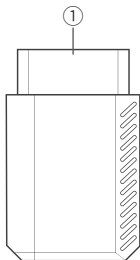

Positive

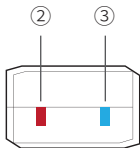

bottom

Product Introduction:

- ① **OBD-II 16-Pin Interface**(Connect the vehicle's OBDII diagnostic connector)
- ② **Power light**
- ③ **Indicator light**

Safety Precautions


For your safety and the safety of the vehicle, please read this manual carefully and fully understand all safety instructions.

Always read the vehicle's manual and follow all specified precautions before performing any testing or repair procedures.


- When using this product, keep a safe distance from moving or hot engine components. Avoid contact with electrical and ensure your body and clothing do not come into contact with any moving, hot, or electrically charged parts.
- Always wear certified safety goggles to protect your eyes from sharp objects and corrosive liquids.
- During testing, do not smoke near the vehicle. Keep away from all open flames, fuel, batteries, and flammable vapors.
- Do not test while driving. Always operate the product in a safe location.
- Before testing, turn off the ignition or disconnect the product from the Data Link Connector (DLC) to avoid damaging the product or the vehicle's electronic components.

On-Board Diagnostic Interface

The OBD connector locations vary by vehicle model.

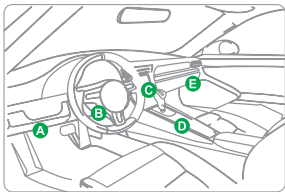

After locating the vehicle's OBD interface, insert the product's diagnostic connector into it, then connect to the App.

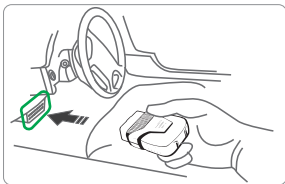

Android Download:

Scan the QR code.



SynTrek




Open the Google Play Store, search for
“SynTrek”




iOS Download:

Open the App Store, search for “SynTrek”。

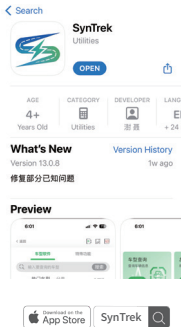

1. Software Activation

First, ensure the network connection is stable. Open “SynTrek”. Enter the product serial number and activation code to complete binding

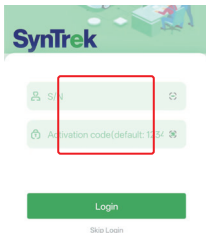

The image shows the SynTrek app's login screen. At the top is the SynTrek logo with a green background and a cartoon character. Below the logo are two input fields. The first field is labeled 'S/N' and has a red rectangle around it. The second field is labeled 'Activation code(default: 1234)' and has a small 'x' icon to its right. Below these fields is a green 'Login' button and a smaller, lighter green 'Skip Login' link.

SynTrek

S/N


Activation code(default: 1234)

Login

Skip Login


2. Bluetooth connection

On the home screen, click the Bluetooth VCI icon at the top right. A blue icon means the connection is successful.

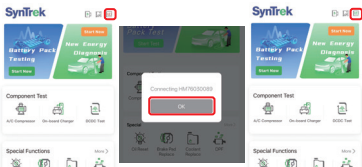

3. Software program

Click 'Discover', find the Download Center, and choose the desired brand and special functions


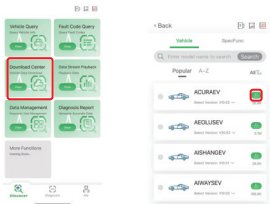


4.Diagnostic Feedback

When you encounter a problem during a diagnostic operation, you can immediately send diagnostic feedback, and the diagnostic data logs will be automatically attached.

Steps:

- 1.Tap “Me”, then tap “Help & Feedback”.
- 2.Select the issue type.
- 3.Write a description of the problem.
- 4.Tap “Submit”.

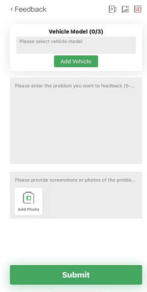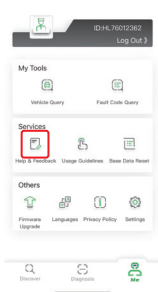

Product Specifications

Communication Technology:	Bluetooth5.4
Input Voltage:	DC 9-18 V
Operating Temperature:	¹ -20~70°C (14~158°F), Relative Humidity: <90%
Operating Current:	≤100mA
Product Dimensions:	73mm*47mm*24mm
Net Weight:	0.06KG

Warranty Certificate

Warranty Terms: SynTrek' s one-year limited warranty does not apply under the following circumstances:

- 1.Warranty service is not provided beyond the warranty period.
- 2.Product damage caused by improper installation or improper operation.
- 3.Damage resulting from unauthorized modifications, replacement of internal components, or other human-caused damage.
- 4.Products damaged due to natural disasters, accidents, liquid ingress, or other similar causes.